


Reflex Operating Instructions **Reflex M, Reflex DP and Reflex DSP**

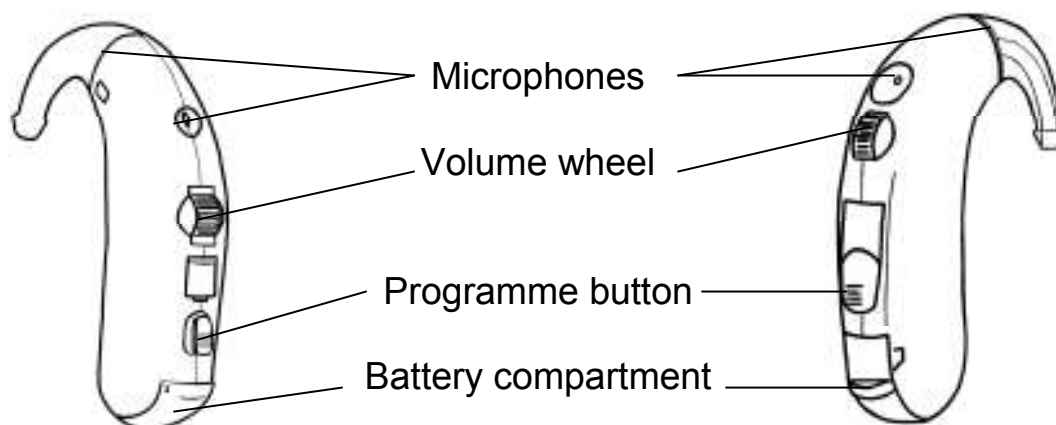


The Audiologist may have put a RED marker on your RIGHT hearing aid and a BLUE marker on your LEFT hearing aid.

Each hearing aid battery should last at least 7 days. The hearing aid will beep during the last hour of battery life.

Changing the battery

Pull open the battery compartment at the bottom. Throw the old battery away. Remove the sticky label from the new battery, and put the battery in with the flat side (with a small cross on it) facing upwards. If the battery compartment sticks when you try to shut it, check that you have the battery in the right way round. The hearing aid will not work if the battery is upside down.

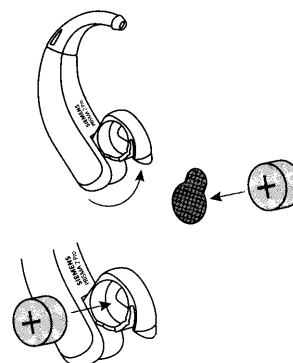

Hearing aid batteries contain dangerous chemicals. Do not use them in other equipment. Never throw them into a fire or try to recharge them. Keep them away from small children. If swallowed, see a doctor.

Turning the hearing aid on and off

Follow the instructions ticked below for your hearing aid:

| | | |
|---|---|--|
| <u>Battery compartment</u> <input type="checkbox"/> | Open the battery compartment to the first stop to switch the hearing aid OFF. Close the battery compartment fully to turn the hearing aid ON. | |
| <u>Programme button</u> <input type="checkbox"/> | Hold the programme button down for 3 seconds to turn the hearing aid OFF. After 10 seconds have passed, you can turn the hearing aid back ON if you wish, by holding the button down for 3 seconds again. | |

Hearing aid user controls

You may be charged if you lose or damage your hearing aid through negligence.

Your hearing aid is fully automatic and will make its own adjustments to suit your environment. However, you have the option, if you wish, of making your own adjustments using the following manual controls:

Volume wheel

When you turn the hearing aid on, it should automatically go to a volume level which is comfortable for you. It may take a few days for the hearing aid to 'learn' what this level is.

You can alter the volume by rolling the volume wheel up (to make the aid louder) or down (to make it quieter). If you try to move the hearing aid beyond the loudest or quietest level it can provide, it will beep to tell you that it is at the edge of its volume range and cannot be altered any further.

Programme button

Your hearing aid has up to 3 different programmes, as follows:

| Programme | Description |
|------------|--|
| 1 (1 beep) | General programme adapting itself to most situations |
| | |
| | |

The hearing aid automatically goes to Programme 1 every time you switch it off and then on again. If we have added other programmes and you want to access them, you can do this by pressing the programme button briefly, but only after the aid is turned on.

e2e

If you have a Reflex hearing aid in each ear, they will automatically communicate with each other to help provide you with balanced hearing. For example, if you manually increase the volume on one hearing aid, the other one will increase its volume as well.

Data Logging

It is important to us that your hearing aid sounds right. The hearing aid stores information such as how long you have it turned on per day, what settings you have it on and what type of sound environments you are in. This helps us to identify adjustments we may need to make to the aid, and also assists us in giving you the best possible advice on using the aid.

